



WINTERIZING YOUR RV



1. Drain Fresh Water Tank
2. Drain Water Heater – Plug at bottom, outside of heater
3. BY PASS Heater:
 1. Use By Pass on back of heater (see Diagram 1 below)
 2. Connect two lines together using ½” pipe nipple.
4. Find pump, disconnect intake line, connect a hose to intake side and put into full waterline antifreeze bottle, turn on pump.
5. One at a time, turn on the faucets until red antifreeze comes out. Do the kitchen hot & cold, drinking water spout if you have one, the bathroom sink, bathtub or shower faucets, toilet, and outside shower. Also, under some trailers or motorhomes, there are low point drains. Open them up until red. Remove screen from city water connection, turn off pump, push in plunger until it turns red. Leave fresh water tank and black & gray water tanks open, also leave plug out of water heater.

This is to help you winterize your unit. Pontiac RV is not responsible for any damage done by freezing pipes if winterizing is not done by us.

Diagram 1

